

## SLSI-80 Group Programming (Factory Default Lookup-Table)

1. SLSI80 System switched on.
2. Dial **000** to unlock programming setup.
3. Dial **\*71** to set group 1 ON -or- **\*61** to set group 1 OFF.
4. Dial **\*51** to set up group 1.
5. Dial **005** to start at relay 5 (1<sup>st</sup> substation)  
*Note: Relay 1 – 4 = Master Stations. From relay 5 onwards = substations.*
6. Dial **0** to switch relay 5 OFF -or- **1** to switch relay 5 ON.
7. Dial **\*** to step to next relay (relay 6 will be substation 2)
8. Dial **0** to switch relay 6 OFF -or- **1** to switch relay 6 ON.
9. Dial **\*** to step to next relay (relay 7 will be substation 3)
10. Repeat steps 6 & 7 above for each relay/substation.
11. To step out of group 1's setup, dial **#**.
12. Dial **971** – call group 1 to test.
13. Dial **#** to cancel call
14. Dial **000** to lock programming setup when done.

If not using the first substation number (e.g. 5) then dial the number station you want, and follow procedure to switch relay on/off as per 6&7 above.

Refer to page in manual for factory default numbers.

## 15. Setup

000	Lock/Unlock programming. Power intercom Off & On if it was on for more than 24 hours.	970	Group 0
*01	Shows the software version	971	Group 1
*02	Lock programming	972	Group 2
*03	Shows the number of master stations	973	Group 3
*04	Shows the number of sub cards	974	Group 4
*05	Enable / Disable auto answer call backs	975	Group 5
*06	Display main master (call back master) #	976	Group 6
*07	LCD buzzer enable / disable in non auto answer mode	977	Group 7
*08	Disable/enables special numbers to Version 1 for testing	978	Group 8 Change period tone 1
*09	Selects Version 1. First sub station #005 Masters 001 to 004	979	Group 9 Change period tone 2
*10	Selects Version 2. First sub station #001 Masters 981 to 984	980	Makes master main unit for auto answer
		981	Master Station
*12	Programs special numbers.	982	Master Station
	# to dial xxx, Calling relay # xxx	983	Master Station
	Press "*" to enter	984	Master Station
*13	Reassurance / Normal sub stations	985	Master Station (optional)
*14	Time out time in seconds	986	Master Station (optional)
*15	Call tone durations duration	987	Master Station (optional)
*16	Change of period tone 1 duration	988	Master Station (optional)
*50	Programs group 0. Enter the first relay number you want to change (3 digits). Press "*" to step to next relay number. Press "7" to step back. Press "0" to clear, Press "1" to set relay number "on". Press "#" to exit out of group setup.		
*51	Programs numbers in group 1	993	Slow beep tone
*52	Programs numbers in group 2	994	Fast beep tone
*53	Programs numbers in group 3	995	Three beep tone
*54	Programs numbers in group 4	996	Change of period tone 1
*55	Programs numbers in group 5	997	Change of period tone 2
*56	Programs numbers in group 6		
*57	Programs numbers in group 7	998	Evacuation tone
*58	Prog. #'s in group 8. Change period tone 1		
*59	Prog. #'s in group 9. Change period tone 2	999	All call
*60	Switches off all numbers in group 0		
*61	Switches off all numbers in group 1	*	Press to talk
*62	Switches off all numbers in group 2	#	Cancel
*63	Switches off all numbers in group 3		
*64	Switches off all numbers in group 4		
*65	Switches off all numbers in group 5		
*66	Switches off all numbers in group 6		
*67	Switches off all numbers in group 7		
*68	Switch off #'s in group 8 Change period 1		
*69	Switch off #'s in group 8 Change period 2		
*70	Switches on all numbers in group 0		
*71	Switches on all numbers in group 1		
*72	Switches on all numbers in group 2		
*73	Switches on all numbers in group 3		
*74	Switches on all numbers in group 4		
*75	Switches on all numbers in group 5		
*76	Switches on all numbers in group 6		
*77	Switches on all numbers in group 7		
*78	Switch on #'s in group 5 Change period 1		
*79	Switch on #'s in group 5 Change period 2		