

SLSI-80 FAQ

1. HOW TO REMOVE MASTERS FROM ALL CALL (USE GROUP 0)

1. SLSI 80 system switched on.	SLSI-80 Ver 1.16
2. Dial 000 – to unlock your programming setup.	Setup unlocked
3. Dial *70 – to set group 0 on	Group 0 Set
4. Dial *50 – to set up group 0.	Group 0: Sub?
5. Dial 001 – to start at relay 1 (1 st master station)	Group 0: 001 on
6. Dial 0 – to switch relay 1 off (1 st master station)	Group 0: 001 off
7. Dial * - to step to next relay (2 nd master station)	Group 0: 002 on
8. Dial 0 – to switch relay off (2 nd master station)	Group 0: 002 off
9. Dial * - to step to next relay (3 rd master station)	Group 0: 003 on
10. Dial 0 – to switch relay3 off (3 rd master station)	Group 0: 003 off
11. Dial * – to step to next relay (4 th master station)	Group 0: 004 on
12. Dial 0 – to switch relay 4 off (4 th master station)	Group 0: 004 off
13. Dial * - to step to next relay (1 st substation)	Group 0: 005 on
14. Dial # - to step out of group 0's setup	SLSI-80
15. Dial 970 – call group 0 to test	Group call 0
16. Dial # - to cancel call	SLSI-80
17. Dial 000 – to lock your programming setup	Setup Locked

2. HOW TO REMOVE THE MASTERS FROM GROUP 8 (Change of period 1)

18. SLSI 80 system switched on.	SLSI-80 Ver 1.16
19. Dial 000 – to unlock your programming setup.	Setup unlocked
20. Dial *58 – to set up group 8.	Group 8: Sub?
21. Dial 001 – to start at relay 1 (1 st master station)	Group 8: 001 on
22. Dial 0 – to switch relay 1 off (1 st master station)	Group 8: 001 off
23. Dial * - to step to next relay (2 nd master station)	Group 8: 002 on
24. Dial 0 – to switch relay off (2 nd master station)	Group 8: 002 off
25. Dial * - to step to next relay (3 rd master station)	Group 8: 003 on
26. Dial 0 – to switch relay3 off (3 rd master station)	Group 8: 003 off
27. Dial * – to step to next relay (4 th master station)	Group 8: 004 on
28. Dial 0 – to switch relay 4 off (4 th master station)	Group 8: 004 off
29. Dial * - to step to next relay (1 st substation)	Group 8: 005 on
30. Dial # - to step out of group 8's setup	SLSI-80
31. Dial 978 – call group 8 to test	Group call 8
32. Dial # - to cancel call	SLSI-80
33. Dial 000 – to lock your programming setup	Setup Locked