


# DIGI LOCK DL207A

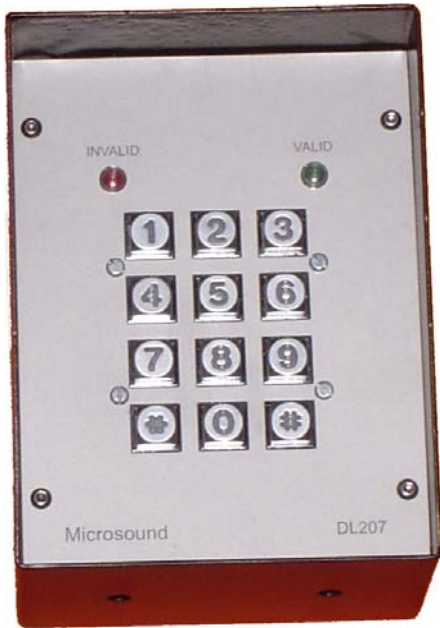

## 1. Buttons

- \* program
- # enter

## 2. New pin

- Enter pin + 2 (default 123456 + 2 --- 123458)
- Press '\*', if the pin is correct the red led will light
- Enter new pin.
- Press '\*', red led will go off

## 3. New strike duration

- Enter pin + 3 (default 123456 + 3 --- 123459)
- Press '\*', if the pin is correct the red led will light
- Enter new duration in seconds (max 3 digits, 254)
- Press '\*', red led will go off.

## 4. Latching / Impulse

- Enter pin + 4 (123456 + 4 --- 123460#)
- Enter the same pin again to unlatch
- Or press '#' to clear latch

## 5. Buzzer enable / disable

- Enter pin + 5 (123456 + 5 --- 123461)
- Press '\*' to toggle the buzzer.


## 6. Service

- On start up.
  - Green led flashes 4 x for cold start
  - Red led flashes 2 x for warm start
- Defaults
  - Pin '123456#'
  - Door strike duration 1 seconds

## 7. Technical Specifications

- Power supply 14–24V AC/DC
- Idle 4ma @ 14VDC
- Active 40ma @ 14VDC
- Door contacts 240vac 10A

## 8. Termination

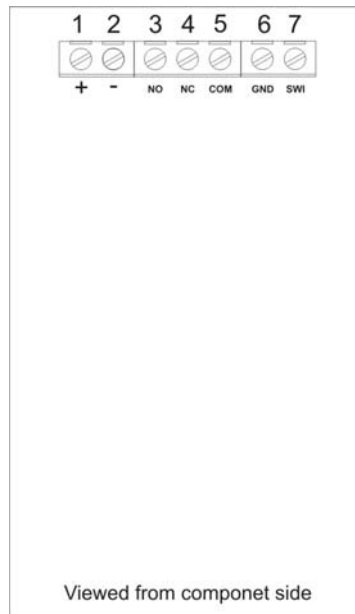

1. +
2. -
3. Contact NO
4. Contact NC
5. Contact Common
6. Ground
7. Switch input

## 9. Options

DL207P – Plastic keypad  
DL207A – Metal keypad with backlight  
DL207E – Excluding backbox

## 10. Guarantee

The DL207 is guaranteed by the manufacture for a period of six months from the date of delivery against faulty components and faulty workmanship (ex factory).

Manufactured by:  
Microsound Systems cc  
P.O. Box 38220  
Booyens 2016  
Phone 011 493-2424  
Fax 011 493-0347  
Email: [sales@microsound.co.za](mailto:sales@microsound.co.za)  
Web: <http://www.microsound.co.za>