

DIGI LOCK DL207P



1. Buttons

- * program
- # enter

2. New pin

- Enter pin + 2 (default 123456 + 2 --- 123458)
- Press '*', if the pin is correct the red led will light
- Enter new pin.
- Press '*', red led will go off

3. New strike duration

- Enter pin + 3 (default 123456 + 3 --- 123459)
- Press '*', if the pin is correct the red led will light
- Enter new duration in seconds (max 3 digits, 254)
- Press '*', red led will go off.

4. Latching / Impulse

- Enter pin + 4 (123456 + 4 --- 123460#)
- Enter the same pin again to unlatch
- Or press '#' to clear latch

5. Buzzer enable / disable

- Enter pin + 5 (123456 + 5 --- 123461)
- Press '*' to toggle the buzzer.


6. Service

- On start up.
 - Green led flashes 4 x for cold start
 - Red led flashes 2 x for warm start
- Defaults
 - Pin '123456#'
 - Door strike duration 1 seconds

7. Technical Specifications

- Power supply 14–24V AC/DC
- Idle 4ma @ 14VDC
- Active 40ma @ 14VDC
- Door contacts 240vac 10A

8. Termination

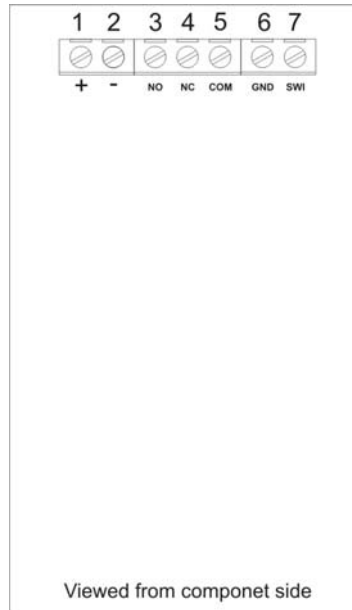

1. +
2. -
3. Contact NO
4. Contact NC
5. Contact Common
6. Ground
7. Switch input

9. Options

- DL207P – Plastic keypad
- DL207A – Metal keypad with backlight
- DL207E – Excluding backbox

10. Guarantee

The DL207 is guaranteed by the manufacture for a period of six months from the date of delivery against faulty components and faulty workmanship (ex factory).

Manufactured by:

Microsound Systems cc

P.O. Box 38220

Booyens 2016

Phone 011 493-2424

Fax 011 493-0347

Email: sales@microsound.co.za

Web: <http://www.microsound.co.za>